

Ghent Triumph Tabletop/ Floor Display Easel

Instruction Manual




Provided by

MyBinding.com

When Image Matters.

Call Us at 1-800-944-4573

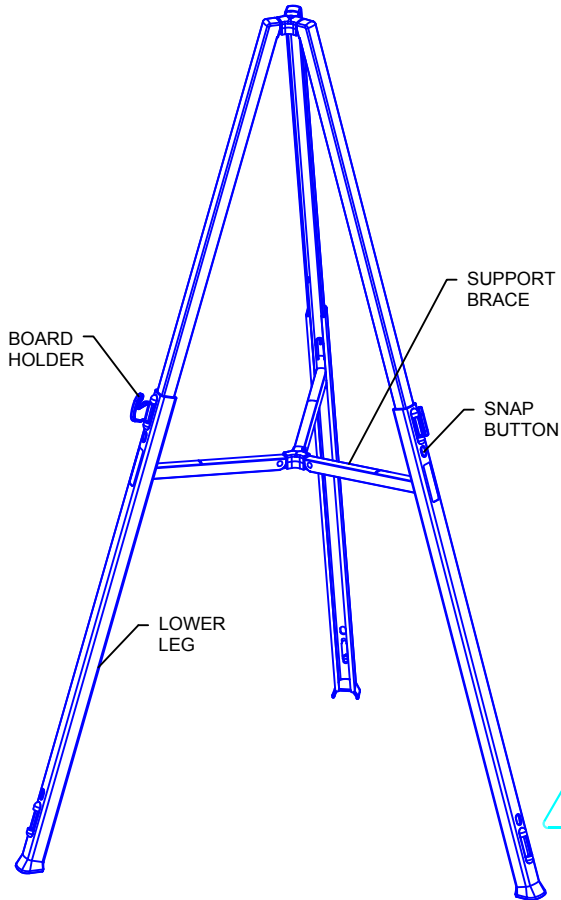

1. Choose a level location for your Triumph Display Easel.

2. The Triumph Display Easel is adjustable at 37" and 62" high.
To adjust the height of the easel, simply:

2.1 Spread the three legs by snapping each leg away from the support braces.

2.2 Locate the snap button and gently depress while sliding the lower easel leg until the snap button engages in the fully extended position. Repeat for all three legs. Please note that it is possible to pull the lower leg off. If this happens, simply depress the snap button and slide the leg back on.

3.0 To use your Triumph Display Easel at the 37" height, it may be necessary to move the two board holder as follows:

3.1 Depress the snap button and remove the lower leg.

3.2 Move the board holder to the desired location and hold in place while depressing the snap button and replacing the lower leg.

4.0 Swing the two board holders into position. Gently rest your presentation on the board holders.

Please note that your Triumph Display Easel can hold a maximum of 25 pounds and is intended for display purposes only.

TRIUMPH DISPLAY EASEL INSTRUCTION SHEET

GHENT
MANUFACTURING, INC

IS19250



MyBinding.com
5500 NE Moore Court
Hillsboro, OR 97124
Toll Free: 1-800-944-4573
Local: 503-640-5920