

***SealerSales KF-772DH***  
***Direct Heat Portable***  
***Clam Shell Sealer***

Instruction Manual



Provided by

**MyBinding.com**  
*When Image Matters.*

Call Us at 1-800-944-4573

## ■ OPERATION INSTRUCTIONS

### *Clam Shell* **KF-772DH**

**Step 1.** Insert the power plug into the socket. Check the voltage of the power socket.

**Step 2.** Push the switch to either the “HI” or “LO” setting based on the thickness of your clam shell. Allow the sealer to warm-up for 2-3 minutes.

**Step 3.** Place the clam shell edge between the sealing bars and hold down for one second. If the seal weld holds, continue in this manner. If the welding appearance is broken or damaged, slide switch to “LO” position. If the welding appearance is incomplete, slide to “HI” position.

#### **NOTE:**

- Never touch the heated bars of the unit
- Never allow any liquid to come in contact with the unit
- Never shock or drop the unit
- Keep the sealing bars clean
- Always unplug the unit when not in use
- Allow the unit to cool down before putting away

