

Tamerica / Tashin TCC6000 ***13" Professional Photo*** ***Laminator***

Instruction Manual



Provided by

MyBinding.com

When Image Matters.

Call Us at 1-800-944-4573

OPERATION INSTRUCTIONS

TCC6000

1 IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed to reduce the risk of electric shock and injury to people, including the following:

1. Read all instructions.
2. Always unplug the appliance when not in use or before cleaning.
3. Do not use outdoors.
4. Extreme caution should be taken when the appliance is used by or near children or invalids.
5. To protect against risk of electrical hazards, do not immerse cord, plugs, or appliances in water or other liquids.
6. Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or is damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. Do not use accessory attachments not recommended or sold by the appliance manufacturer.
8. Do not let cord hang over edge of counter, or touch hot surfaces.
9. Do not use the appliance for other than intended use. This appliance is intended for Office or Household use only.

2 LOCATION

Please remove the laminator carefully from the transit packaging, place the machine on a flat work surface. Locate the machine in the area where it will normally be used ensuring adequate room for the finished laminate to feed out at the back.

3 HOW TO USE

RECOMMENDED TEMPERATURE/MOTOR SPEED IS AS BELOW:

POUCH THICKNESS	TEMPERATURE	MOTOR SPEED
75 MIC.	95 DEGREES C	4
125 MIC.	105 DEGREES C	4
175 MIC.	110 DEGREES C	3
250 MIC.	125 DEGREES C	3

1. Plug into the nearest ac outlet and turn on the power switch. The digital screen will start.
2. When the digital screen starts, it will show the actual machine temperature. You can push the "▲" or "▼" key of temp/set to select the temperature you need. (The lowest temperature you can set up is 90 degrees C and up.) The digital screen will keep showing the temperature you have selected for 3 seconds and then change the actual machine temperature.

3. Push the "HOT" key for heating once you have set the temperature and the heater light will glow.
4. When the machine temperature reaches the one you have selected, the machine will buzz and the ready light will glow.
5. Push the "▲" or "▼" key of motor to select the motor speed.
6. Once the above steps have been followed, you can start laminating your documents.
7. If a jam occurs while processing your documents and if the document jams, you can release the document from the machine by pushing the "REVERSE" key.
8. When you finish the laminating job, push the "COLD" key for cooling the machine. Please note: you can only turn the motor speed to "0" when the actual machine temperature is lower than 80 degrees C. We also recommend you turn off the machine only after the actual machine temperature is lower than 50 degrees C. This will protect the heated rollers from developing "FLAT" spots.

4 CARE AND CLEANING

1. This appliance is for Office or Household use only. Any servicing, other than cleaning and user maintenance, should be performed by an authorized service representative.
2. Do not immerse in water.
3. To reduce the risk of fire or electric shock, do not remove the base. No user serviceable parts inside.
 - Keep your hands and cord away from hot parts of the appliance during operation.
 - Never clean with scouring powders or hand implements.
 - Wipe clean with a soft cloth.